

Jeremiah

Lighting

28073-SPZ

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

GENERAL

Remove all parts and hardware from the box and the mounting package and make sure that none are missing by referencing the illustrations provided.


ASSEMBLY AND INSTALLATION

1. Pull the SUPPLY WIRES (8 & 10) and the SUPPLY GROUND WIRE (7) out from the OUTLET BOX (1) (not included) and attach the MOUNTING STRAP (2) assembly to the OUTLET BOX (1) using the slotted holes of the MOUNTING STRAP (2) and the OUTLET BOX SCREWS and WASHERS (3). [See Fig. 1]
2. Remove the DECORATIVE NUT (5) from the THREADED ROD (14) and set aside. Place the CANOPY (15) over the OUTLET BOX (1) so that the THREADED ROD (14) protrudes out through the mounting hole located in the center of the CANOPY (15) no less than 1/4". Remove the CANOPY (15) and secure the position of the THREADED ROD (14) by tightening the 1/8" IPS HEX NUT (4) against the MOUNTING BRACKET (2). [See Fig. 1]
3. Attach one OPEN CHAIN LINK (16) to each end of the CHAIN (17). Then attach one end of the CHAIN (17) to one of the loops on the CANOPY (15) and attach the other end of the CHAIN (17) to one of the small loops at the top of the FIXTURE (18). Close the ends of the OPEN CHAIN LINKS (16). Repeat for other CHAIN (17). [See Fig. 1]
4. Unravel the FIXTURE LEAD WIRES (9 & 11) and FIXTURE GROUND WIRE (6) and then thread them through the THREADED ROD (14). Pull the FIXTURE LEAD WIRES (9 & 11) and the FIXTURE GROUND WIRE (6) upward to remove any excess slack.
5. Attach the power supply wires to the fixture lead wires by connecting the BLACK SUPPLY WIRE (8) to the SMOOTH FIXTURE LEAD WIRE (9) and the WHITE SUPPLY WIRE (10) to the RIBBED FIXTURE LEAD WIRE (11). Loop the SUPPLY GROUND WIRE (7) around the GROUND SCREW (13) on the MOUNTING STRAP (2). [Note: Be sure to provide an extra 3in. length of the SUPPLY GROUND WIRE (7) for connection to the FIXTURE GROUND WIRE (6).] Connect the remaining SUPPLY GROUND WIRE (7) to the FIXTURE GROUND WIRE (6). Use a WIRE CONNECTOR (12) for all wire connections. Push wiring and connections inside the OUTLET BOX (1). [See Fig. 1]
6. Place the CANOPY (15) back over the THREADED ROD (14) and secure it in place using the DECORATIVE NUT (5) provided.
8. Attach GLASS SHADES (20) to FIXTURE (18) with the SOCKET RINGS (19).
9. Install bulbs, **MAXIMUM 100W** each.

INSTALLATION IS NOW COMPLETE

SEVILLE

FIG. 1

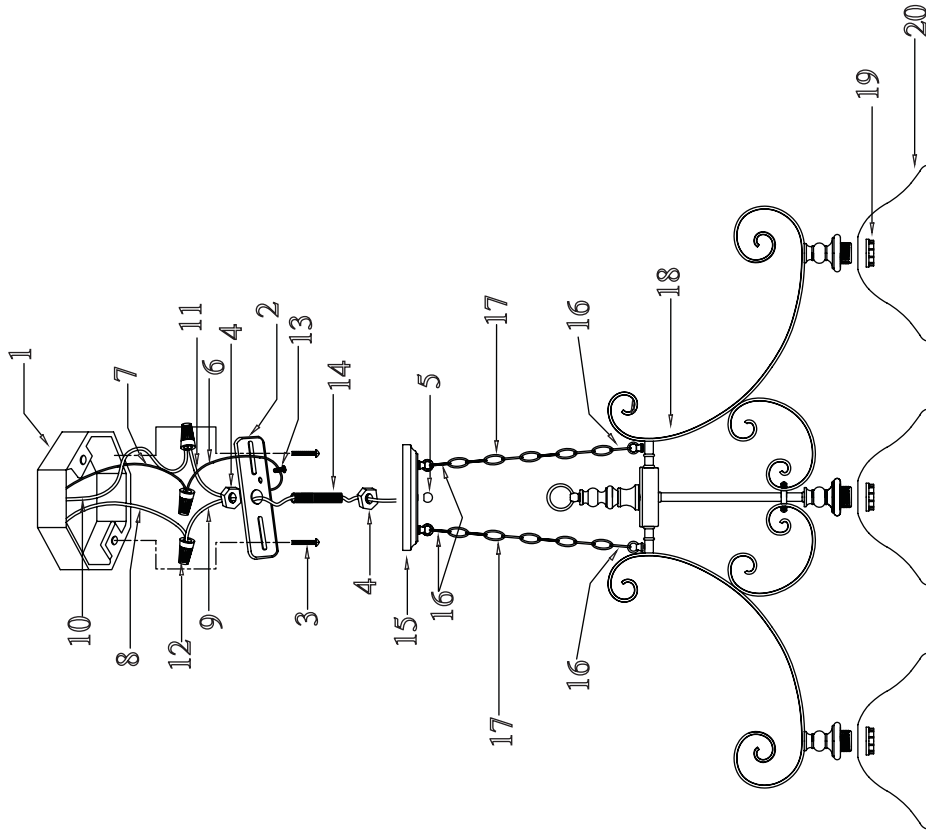

3-LIGHT ISLAND

- | | |
|--|---------------------------------|
| 1. OUTLET BOX (NOT INCLUDED) | 11. RIBBED FIXTURE LEAD WIRE |
| 2. MOUNTING STRAP | 12. WIRE CONNECTOR |
| 3. OUTLET BOX SCREW and WASHER
(pre-attached to outlet box) | 13. GROUND SCREW (pre-attached) |
| 4. HEX NUT (pre-attached) | 14. THREADED ROD (pre-attached) |
| 5. DECORATIVE NUT (pre-attached) | 15. CANOPY |
| 6. FIXTURE GROUND WIRE | 16. OPEN CHAIN LINK |
| 7. SUPPLY GROUND WIRE (not included) | 17. CHAIN |
| 8. BLACK SUPPLY WIRE (not included) | 18. FIXTURE |
| 9. SMOOTH FIXTURE LEAD WIRE | 19. SOCKET RING |
| 10. WHITE SUPPLY WIRE (not included) | 20. GLASS SHADE |

Customer Service: 1 (800) 527-1292